
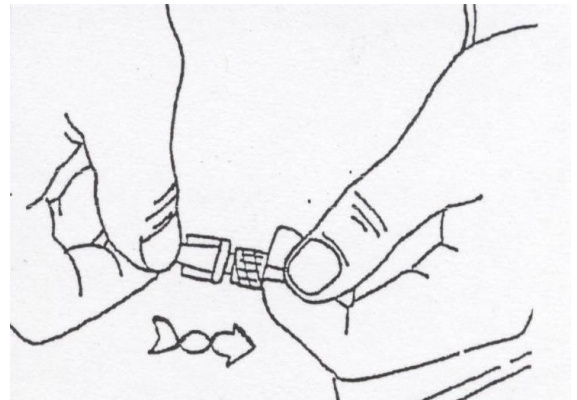


## ADDING A FILTER TO YOUR I.V. TUBING

When mixing an I.V. medication at home and the tubing doesn't have an *in-line* filter, it is necessary to connect an add-on filter to the administration tubing.

### **Attaching the *add-on* filter to the administration tubing:**

1. Wash hands thoroughly, for at least 20 seconds.
2. Remove the protective cap from the shorter length of tubing on the filter.
3. Remove the protective cap from the end of the administration tubing. Be careful to keep the exposed end sterile.
4. Using a twisting motion, attach the filter tubing to the administration set tubing.
5. When priming the IV tubing, invert the filter to fill completely.
6. Wash hands thoroughly, for at least 20 seconds.

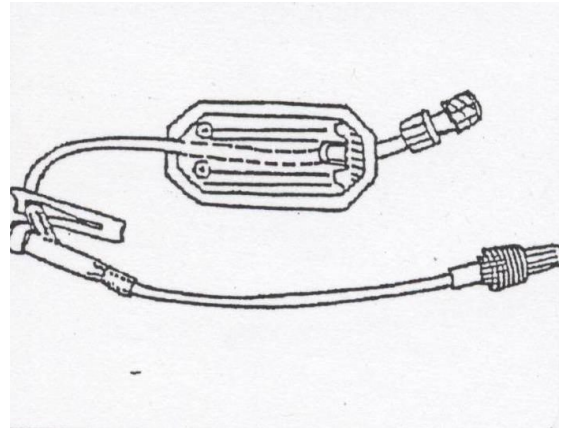

### **NOTES:**